


* MALE= G-HSM-600T-HMI-SD1
 * FEMALE= G-HSM-600T-HMI-SD2

G-HSM-600T-NM-**XXXX** - **XXXX**-SD**x**
 sensor 1-3 sensor 4-6
 sensor voltage rating and length
 status display gender

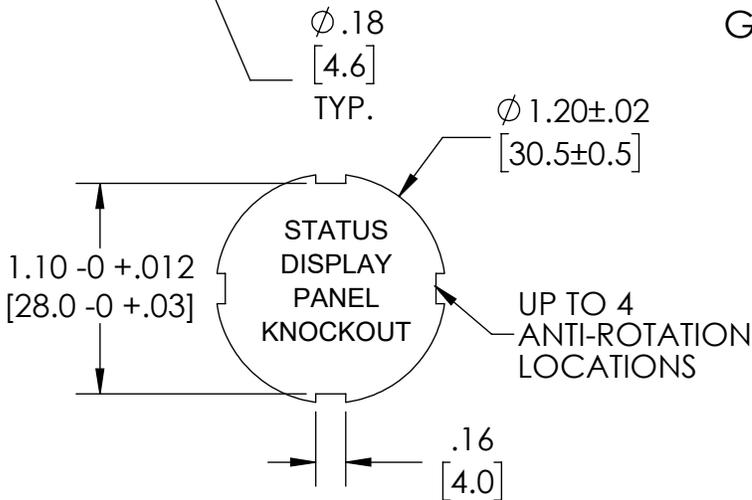

Part no.	Description
XXXX	No Sensor
0605	0.5 Meter 600v sensor
0610	1 Meter 600v sensor
0620	2 Meter 600v sensor
Contact a representative for further options.	
* Parts available individually	

NOTE:

- 1) REFER TO INSTALLATION INSTRUCTIONS TO ENSURE PROPER INSTALLATION.
- 2) ALWAYS FOLLOW YOUR LOCAL/FACILITY ELECTRICAL CODES AND PROCEDURES.
- 3) FOR DETAILED COMPONENT WIRING AND SPECIFICATIONS, REFER TO THE APPLICABLE DATA SHEETS.
- 4) COMPONENT LOCATIONS OUTLINED IN DRAWING ARE APPROXIMATE
- 5) CONSULT FACTORY FOR ACTUAL PRODUCT CONFORMITY, LISTINGS AND CERTIFICATIONS.