

* Part numbers reflected

R-3KW-LCF

R-3KWA-LCF R-3KWS-LCF

R-3KW2-LCF

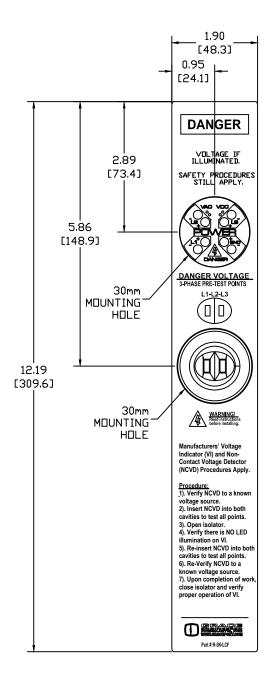

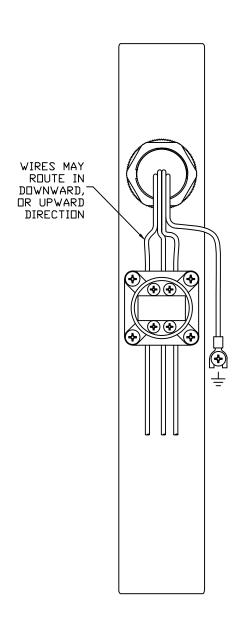

NOTF:

- 1.) REFER TO INSTALLATION INSTRUCTIONS FOR PROPER INSTALLATION.
- 2.) ALWAYS FOLLOW LOCAL WIRING CODES
- 3.) FOR DETAILED SPECIFICATIONS SEE DATA SHEET

Warning: Verify an electrical conductor has been de-energized using an adequately rated test equipment before working on it. Follow appropriate Energy Control (Lockout/Tagout) procedures as per OSHA Subpart S; the current edition of NFPA 70E; and the current edition of CSA Z462. Warning: Non-Contact Voltage Detectors (NCVD) require solidly grounded power systems for proper operation. Using NCVDs and/or SafeSide? voltage portals on power systems with a floating, isolated grounds, or other ungrounded systems will result in false-negative voltage indication (voltage present, but not indicated by the NCVD). Follow the NCVDs? manufacturer operating instructions for proper procedures and operation of the NCVD.

 ${\tt SafeSide(R)} \ \ is \ \ a \ \ Registered \ \ Trademark \ \ of \ \ Grace \ \ Engineered \ \ Products, \ Inc.$ Property of Grace Engineered Products, Inc.