


Voltage Indicator  
hole cutout 30mm

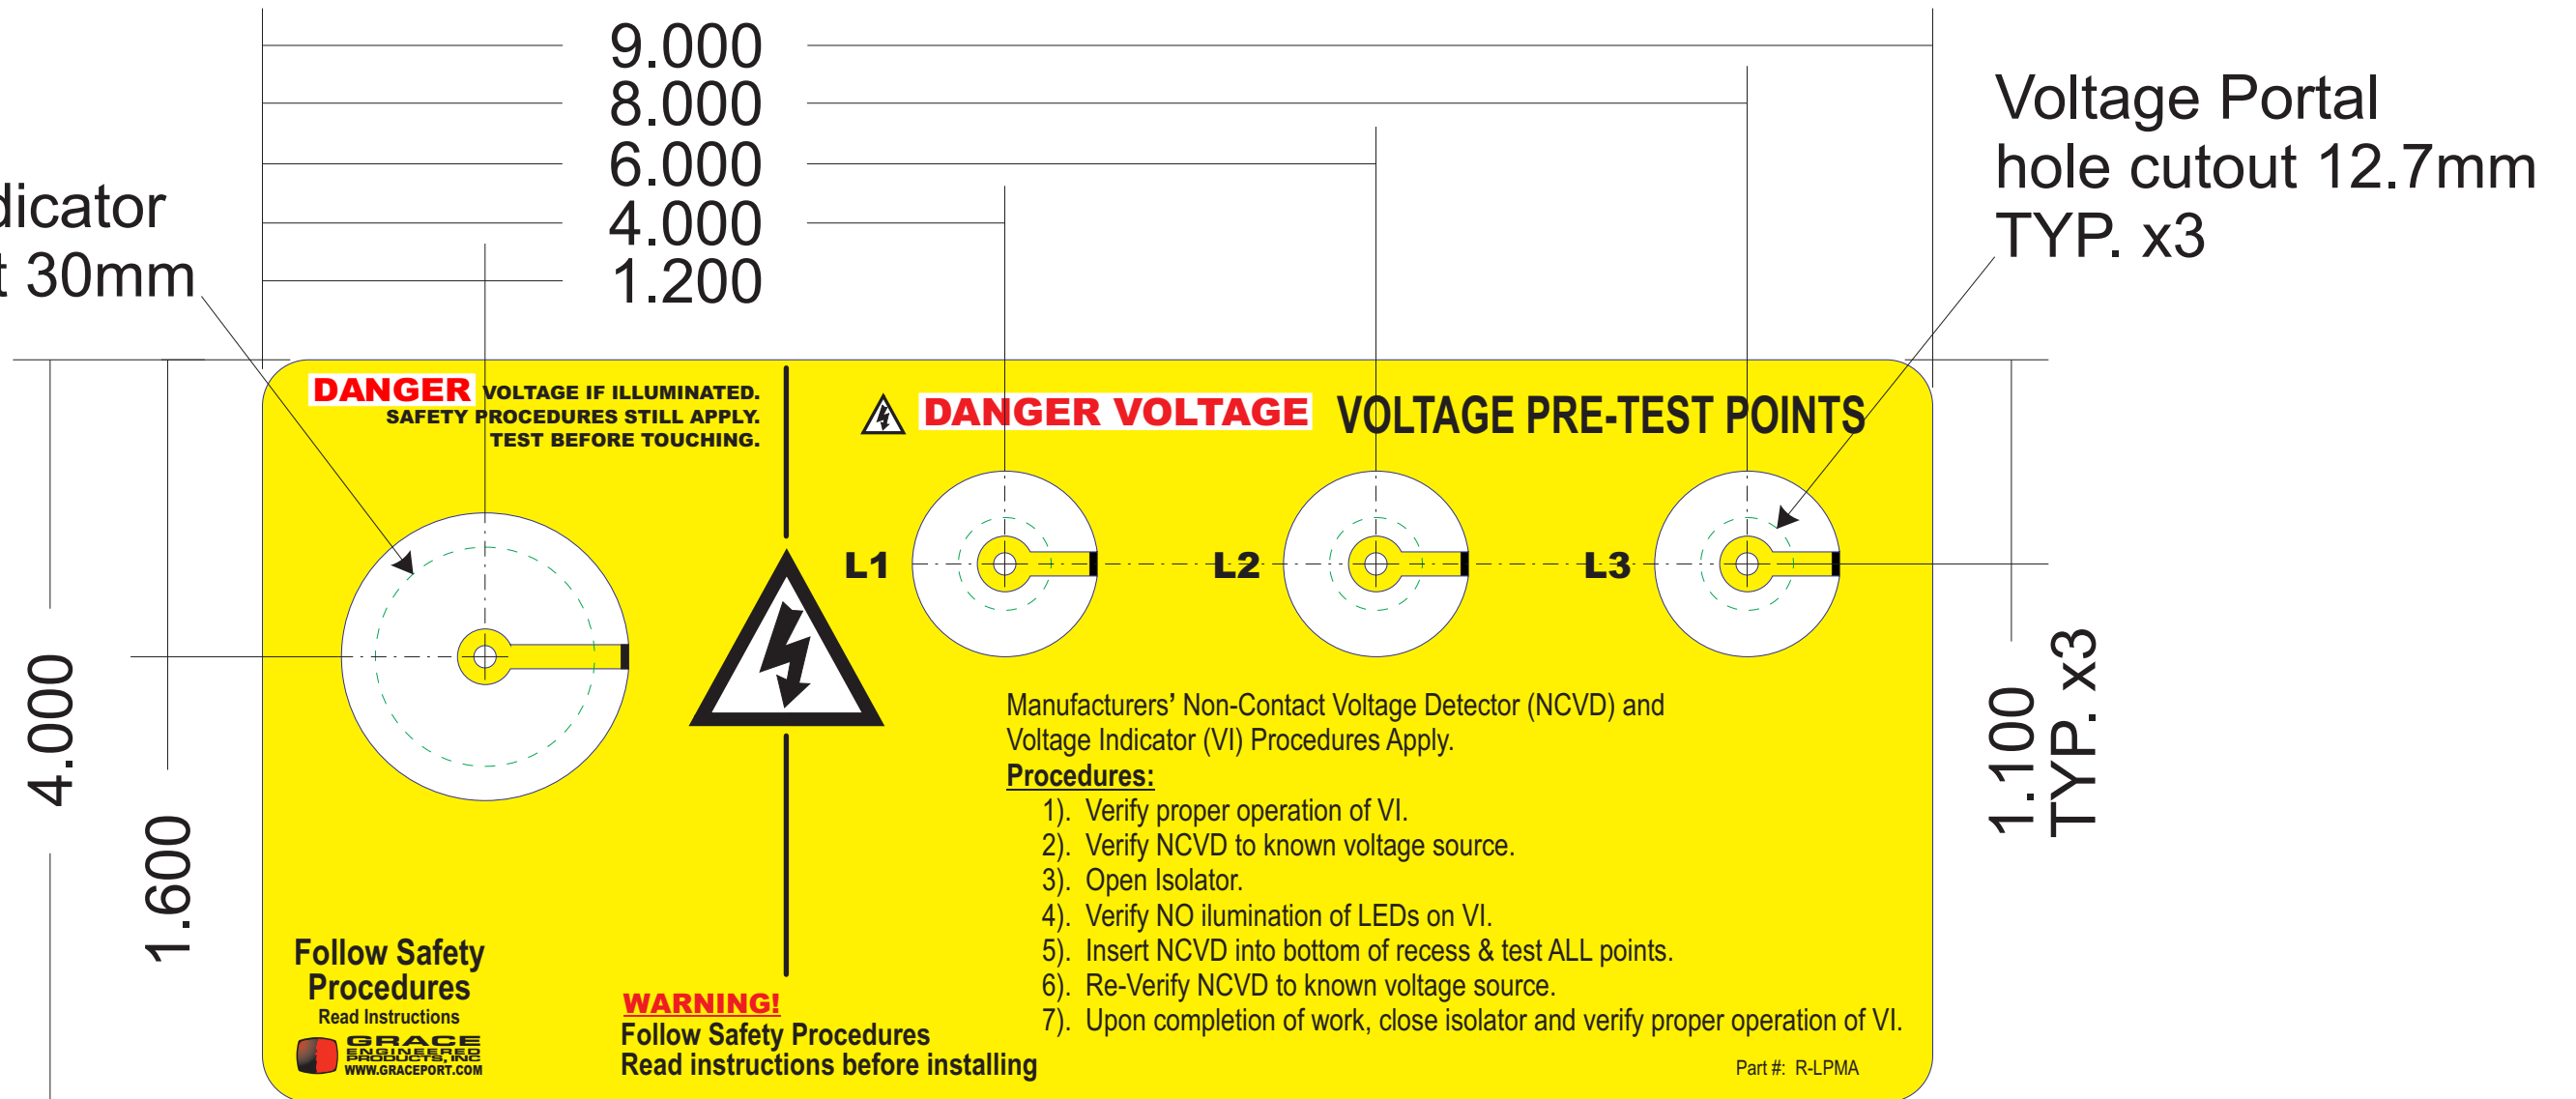

Voltage Portal  
hole cutout 12.7mm  
TYP. x3

1.100  
TYP. x3

**Follow Safety Procedures**  
Read Instructions  
**GRACE**  
ENGINEERING  
WWW.GRACEPORT.COM

**WARNING!**  
Follow Safety Procedures  
Read instructions before installing

Manufacturers' Non-Contact Voltage Detector (NCVD) and Voltage Indicator (VI) Procedures Apply.

**Procedures:**

- 1). Verify proper operation of VI.
- 2). Verify NCVD to known voltage source.
- 3). Open Isolator.
- 4). Verify NO illumination of LEDs on VI.
- 5). Insert NCVD into bottom of recess & test ALL points.
- 6). Re-Verify NCVD to known voltage source.
- 7). Upon completion of work, close isolator and verify proper operation of VI.

Part #: R-LPMA